
1. Parts & Features

- Product Features

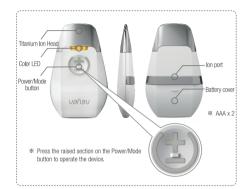

► The timemachine uses galvanic ions to apply a micro-current into the skin. With the micro-current and vibration about 10,000 times minute. this device helps maximize the absorption of treatments and rejuvenate your skin for a fresher, younger appearance.

2. How to Use

- Basic Instructions
- ▶ Before using for the first time, open the battery cover and remove the antidrainage slip.
- ▶ Press the raised section between "+" and "-" on the Power/Mode button.
- Press the button once to enable the standby mode, indicated by the blinking red and blue LFDs.
- ▶ Use the Power/Mode button to cycle between modes. Red LED for (+) ion mode / Blue LED for (-) ion mode When (±) ion mode is on, the LED indicator turns in both red and blue.
- Should contact both Ion Head and Ion port to operate the device.
- ▶ When using it on another person, make sure to make contact with the person with your other hand so the current can flow.
- ► Each mode lasts for 3 minutes and then goes into standby mode after each session (the mode will pause when the device is not in contact with the skin). Press the button once to switch to the next mode.
- ▶ The device will turn off automatically when the Power/Mode button is held for 1 second or there is no activity for 5 minutes.
- ► After using the device, wipe away any remaining skincare product on the Ion Head using a soft cloth or tissue.

2. How to Use

- Button Operation
- You can switch between modes by pressing the Power/Mode button.



Press 1 time power on/standby mode (Both + and - LED indicators will blink.)



Press 2 times (+) ion mode (The + LED indicator will blink and the device will vibrate.)



Press 3 times (-) ion mode (The - LFD indicator will blink and the device will vibrate.)



Press 4 times (±) ion mode (The + LFD indicator will blink and the device will vibrate.)

- * Switch between modes by pressing the Power/Mode button as described above.
- * Hold the Power/Mode buttons for 1 second to turn the device off.

2. How to Use - Instructions by Mode



For basic skincare treatment, massage your skin using Timemachine for 5 minutes every day,







For Décolleté bodycare, massage your skin using Timemachine for 15 minutes 3 times a week.







2. How to Use - Instructions by Mode



For vitaminic skincare treatment, massage your skin using Timemachine for 5 minutes 2 times a week.



For lifting skincare treatment, massage your skin using Timemachine for 15 minutes 3 times a week.





- Select (±) ion mode by pressing the button. ■ Gently massage your face and neck using upward stokes following the skin's texture. Operating time: 3 minutes
- absorption rate.




2. How to Use

- * Each mode lasts for 3 minutes but can be adjusted depending on the absorption rate of your skin.
- * The device may not operate if your skin is too dry. If it stops vibrating. apply more product to your skin to maintain a proper moisture and
- * Adjust the frequency and duration of each session according to vour skin condition.

3. Replacing Battery



- 1 Push down the battery cover while pressing the raised part to remove the battery cover.
- ② Insert battery correctly and ③ replace the battery cover.
- * Make sure that the battery is inserted correctly before replacing the battery cover.

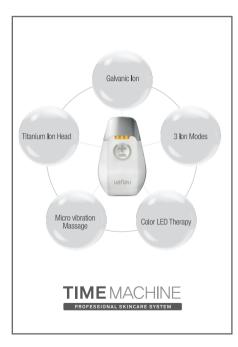

4. Safety Instructions

- Precautions

This device is not suitable for children, pregnant women and patients with heart disease. Do not use on wounds or areas of eczema.

Instructions

Attention

Persons using the following medical appliances are not allowed to use this device:

- persons with an electronic medical device implanted in their bodies (e.g. cardiac pacemakers)
- · persons using a heart-lung machine
- persons using an electronic medical device attached to their bodies (e.g. electrocardiogram device)

Warnings

Do not use the device on the following areas or if you have the following medical conditions:

 Metal allerov External injuries

- Pregnancy

- Serious heart conditions

- Children 12 years of age and under
 Long-term use of steroid hormones
- Serious blood pressure problems
 Other dermatological diseases
- Hemorrhagic areas

- Areas with dermatitis

Infection

- Fractured areas

- Acne inflammation Capillary vasodilation

- · Ears, oral cavity (uvula) and genital areas

4. Safety Instructions

Cautions

- . Dropping or applying excessive force may cause damage to the device. In this case, the warranty may be voided and you may be charged for repair.
- . Do not use the device for any purposes other than originally intended as it may result in accident or injury.
- Make sure to use AAA hatteries
- . Hold the metal part of the ion port for better flow of electric current.
- The device may not operate if your skin is too dry. Make sure to apply plenty of skincare product before use.
- . Do not press too hard against your skin as it may cause irritation.
- . Do not use or store in a bathroom, kitchen or car where it is too humid. dusty or hot.
- . Do not place any heavy object or water on the device as liquid can cause damage.
- Do not clean the device using ignitable liquids such as alcohol, benzene and thinner.
- . Do not disassemble or repair without authorization.
- Keen out of reach of children.
- · Avoid contact with water.
- . If dropped in water, immediately take out the device and dry it in open air and bring it to your local dealer or service representative.
- . Wash your face before using the device.
- . Do not use the device on the same spot for too long as it can cause irritation.
- . Do not wash the device with water as it is not waterproof.
- After using the device, wipe away any remaining skincare product using a soft cloth or tissue.
- . If you have sensitive skin, test it on your hand or arm before use.
- If the device functions abnormally, stop using the device immediately. If the problem persists, contact our service center for assistance.

5. Warranty & After-Sale Service

If the device is found to be defective under normal use during the warranty period. we provide free after-sale service according to the warranty terms. If it is not covered by warranty, after-sale service costs may not be covered.

6. Memo

Covered by warranty

Any defect found within 1 year from the date of purchase under normal use is fully covered by warranty.

Not covered by warranty

- 1. The device is found not defective:
- Make sure to refer to the User Instructions before requesting repair service. You will be charged for the service if the device is found not defective.
- 2. The device failure is caused by the user:
- Failure is caused by mishandling or negligence of the user. (e.g. fall, contact with water, impact, damage, excessive operation)
- Failure is caused by authorized repair service.
- Failure is caused by the user whether intentional or not.
- Failure is caused by the use of authorized parts or accessories.

3 Other cases:

- Failure caused by natural disasters (e.g. fire, flood, power failure).
- approved for home use (Grade B) in any region.

บลทิลบ

